

Box gros weight 9,5 kg – Box vol. 0,30 m³

Operative – mod. 0409S

Structure:	Plastic shell with integrated armrests. Integrated free tilting mechanism (MO1AZ) with working position locking. CMI mesh seat and backrest.
Plastics:	Black and white plastics.   .N – black .W – white
Base:	BG065 – 5 star polished aluminium base Ø 690 mm.  .L – polished BG064 – 5 star nylon base Ø 680 mm.   .N – black .W – white

LOOP

Castors:



R26 – Set of black PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



R27 – Set of black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R28 – Set of hollowed black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R21 – Set of chromed PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R23 – Set of white PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



 
R24 – Set of white hollowed PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



P03 – Set of high chromed metal gliders.



P04 – Set of high black nylon gliders.

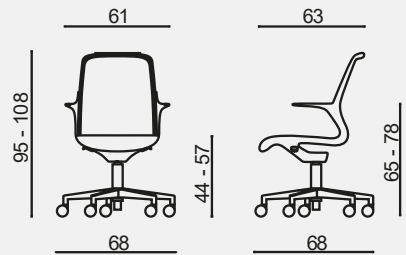

Box gros weight 9,5 kg – Box vol. 0,30 m³

Operative – mod. 0410S

Structure:	Plastic shell with integrated armrests. Integrated free tilting mechanism (MO1AZ) with working position locking. KT supportive fabric seat and backrest.
Plastics:	Black and white plastics.   .N – black .W – white
Base:	BG065 – 5 star polished aluminium base Ø 690 mm.  .L – polished BG064 – 5 star nylon base Ø 680 mm.   .N – black .W – white

LOOP

Castors:



R26 – Set of black PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



R27 - Set of black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R28 – Set of hollowed black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R21 - Set of chromed PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R23 – Set of white PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R24 – Set of white hollowed PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



P03 – Set of high chromed metal gliders.

 


P04 – Set of high black nylon gliders.

LOOP user guide

Chair height adjustment.

Pull the lever on the right upwards without sitting to increase the height of the chair. Press the lever upwards when seating to reduce the height of the chair

**Tilt adjustment.**

Pull the lever on the left to unlock tilting. Press the lever to lock the tilt

