 




Executive – mod. 0100S

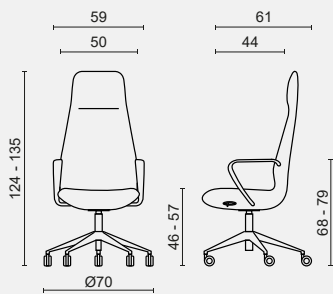


Box gros weight 22,5 kg – Box vol. 0,33 m³

Structure:	Seat with reinforced plastic inner structure. Backrest with Ø 10 mm metallic rod inner structure. Fire-retardant, polyurethane injected foam shell padding, 65 kg/m3 density.
Armrests:	BRSY - armrests in polished aluminium or epoxy varnished finish. See colour chart.
Mechanism:	MS2AQ – self balancing incorporated synchronized mechanism with 3 locking positions, anti-shock.
Base:	BG033 – 5-star base, polished aluminium or epoxy varnished finish, Ø 684 mm. See colour chart.
Castors:	 R26 – Set of black PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.  R27 - Set of black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot  R28 – Set of hollowed black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.  R21 - Set of chromed PP hard floor castors Ø 60 mm and Ø 11 mm pivot.  P03 – Set of high chromed metal gliders.  P04 – Set of high black nylon gliders.



Executive – mod. 0200S

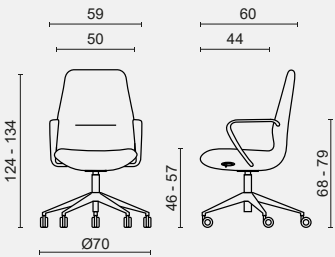


Box gros weight 22,3 kg – Box vol. 0,30 m³

Structure:	Seat with reinforced plastic inner structure. Backrest with Ø 10 mm metallic rod inner structure. Fire-retardant, polyurethane injected foam shell padding, 65 kg/m3 density.
Armrests:	BRSY - armrests in polished aluminium or epoxy varnished finish. See colour chart.
Mechanism:	MS2AQ – self balancing incorporated synchronized mechanism with 3 locking positions, anti-shock.
Base:	BG033 – 5-star base, polished aluminium or epoxy varnished finish, Ø 684 mm. See colour chart.
Castors:	 R26 – Set of black PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.  R27 - Set of black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.  R28 – Set of hollowed black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.  R21 - Set of chromed PP hard floor castors Ø 60 mm and Ø 11 mm pivot.  P03 – Set of high chromed metal gliders.  P04 – Set of high black nylon gliders.

Chair height adjustment.

Pull the lever on the right under the seat to raise the height. Pull the lever while seated to lower the chair height.

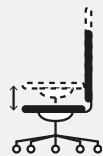

Synchro adjustment.

Push forward the lever on the left under the seat to unlock and backwards to lock.



Colour chart:

