

Box gros weight 16,5 kg – Vol. box 0,25 m³

Operative – mod. 0417S

Structure:	Plastic inner seat with metal reinforcement bars, 70 mm seat slide. 60 kg/m³ fire retardant injected foam padding. Plastic backrest. RS fire retardant 3d mesh upholstery. Height adjustable plastic lumbar support.
------------	--

Plastics:	Black or white plastics.   .N – black .W – white RAL 9003
-----------	--

Armrests:	Without armrests
	BR009.N - black nylon armrests, PU arm pads. Height adjustable.
	BR010.N - 4D adjustable black nylon armrests (height/depth/rotation/width), PU arm pads.
	BR010.L - 4D adjustable black nylon armrests (height/depth/rotation/width) with aluminium structure, PU arm pads.
	BR010.W - 4D adjustable white nylon armrests (height/depth/rotation/width), black body and PU arm pads.
	BR196.W - 2D adjustable armrest (height/width) with chromed body and white nylon arm pads.

Mechanism: **MS11K** – Synchronized mechanism with 5 locking positions and side tension control.



.N – black

Base: **BG065** – 5 star polished aluminium base Ø 690 mm.



.L – polished

BG064 – 5 star nylon base Ø 680 mm.



.N – black



.W – white

Castors:



R26 – Set of black PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



R27 - Set of black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R28 – Set of hollowed black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R21 - Set of chromed PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R23 – Set of white PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R24 – Set of white hollowed PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



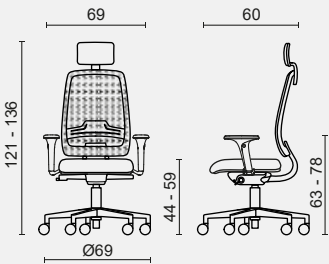
P03 – Set of high chromed metal gliders.



P04 – Set of high black nylon gliders.



Operative – mod. 0419S



Box gros weight 17,15 kg – Vol. box 0,28 m³

Structure:	Plastic inner seat with metal reinforcement bars, 70 mm seat slide. 60 kg/m³ fire retardant injected foam padding. Plastic backrest. RS fire retardant 3d mesh upholstery. Height adjustable plastic lumbar support. Height and orientation adjustable upholstered headrest, fire retardant injected foam padding.
------------	---

Plastics:	Black or white plastics.  .N – black  .W – white RAL 9003
-----------	--

Armrests:	Without armrests
	BR009.N - black nylon armrests, PU amp pads. Height adjustable.
	BR010.N - 4D adjustable black nylon armrests (height/depth/rotation/width), PU amp pads.
	BR010.L - 4D adjustable black nylon armrests (height/depth/rotation/width) with aluminium structure, PU amp pads.
	BR010.W - 4D adjustable white nylon armrests (height/depth/rotation/width), black body and PU amp pads.
	BR196.W - 2D adjustable armrest (height/width) with chromed body and white nylon amp pads.

Mechanism: **MS11K** – synchronized mechanism with 5 locking positions and side tension control.



.N – black

Base: **BG065** – 5 star polished aluminium base Ø 690 mm.



.L – polished

BG064 – 5 star nylon base Ø 680 mm.



.N – black



.W – white

Castors:



R26 – Set of black PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



R27 - Set of black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R28 – Set of hollowed black PP self-breaking hard floor castors Ø 65 mm and Ø 11 mm pivot.



R21 - Set of chromed PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R23 – Set of white PP hard floor castors Ø 60 mm and Ø 11 mm pivot.



R24 – Set of white hollowed PP self-breaking castors Ø 65 mm and Ø 11 mm pivot.



P03 – Set of high chromed metal gliders.

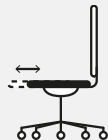


P04 – Set of high black nylon gliders.

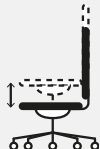
TAM istruzioni utilizzo

Seat slide adjustment.

Press the button situated on the right side of the seat to adjust the seat depth. Release the button to lock the seat in the desired position.

**Chair height adjustment.**

Pull the lever on the right upwards without sitting to increase the height of the chair. Press the lever upwards when seating to reduce the height of the chair.

**Tilt adjustment.**

Turn clockwise the lever on the left to decrease the tilting resistance. Turn the lever counterclockwise to increase the tilting resistance.

**Lumbar support adjustment.**

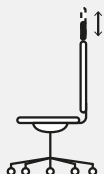
Adjust the lumbar support position by moving the support up or down.



Regolazione inclinazione poggiatesta. Spingere o tirare manualmente il poggiatesta per regolare l'inclinazione.



Regolazione altezza poggiatesta. Alzare o abbassare manualmente il poggiatesta per regolare l'altezza desiderata.

**Armrest height adjustment.**

Press the side button to adjust the height.



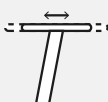
Armrest width adjustment. Unlock the underseat lever to increase or decrease the armrest width. Lock the lever into the desired position.

**Headrest orientation adjustment.**

Manually push or pull the headrest to adjust the tilt.

**Pad rotation adjustment.**

Manually rotate the pad to the desired position.

**Pad rotation adjustment.**

Manually rotate the pad to the desired position.

